


Spacer

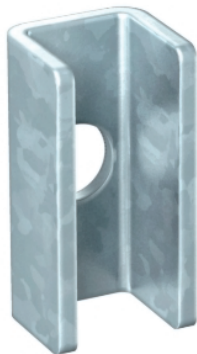

For static reasons, the spacer is always used to prevent the profile from deforming when the fastening bolts are tightened.
Spacer for use in profiles, type TP.

Type	Pack.	Weight	Item No.
	pcs	kg/100 pcs.	
WMSPACERS	20	3,700	6416551
WMSPACERG	20	3,800	6416586

- St** Steel **T** Stainless steel, grade 304
- S** Strip-galvanised **G** Hot-dip galvanised

Dimensions

